


Installation Instructions

Model: Ragstopper

The Universal Valve Ragstopper is designed to prevent debris from entering the storage tank during fuel delivery. It also helps prevent fuel theft by blocking the stinger from entering the tank.

The Ragstopper is designed to fit all standard style fill adapters and swivel adapters. It will not work with a coaxial style fill.

1. Remove the existing fill adapter from the riser pipe. (follow the manufacturer's instructions – a special tool maybe required to remove the adapter depending on the style and brand)
2. Inspect the integrity of the fill adapter and replace if necessary.
3. Inspect the existing gasket inside the fill adapter and replace if necessary.
4. Install the ragstopper into the fill adapter below the existing gasket of the fill adapter. The gasket of the ragstopper must be facing the threaded side of the adapter. **DO NOT** install the ragstopper gasket and the fill adapter gasket back to back. **DO NOT** remove static grounding wire from the ragstopper.
5. Install the fill adapter with the Ragstopper back onto the riser pipe. (It is important to follow the fill adapter manufacturer's installation instructions for proper torque specifications to ensure a proper seal.)

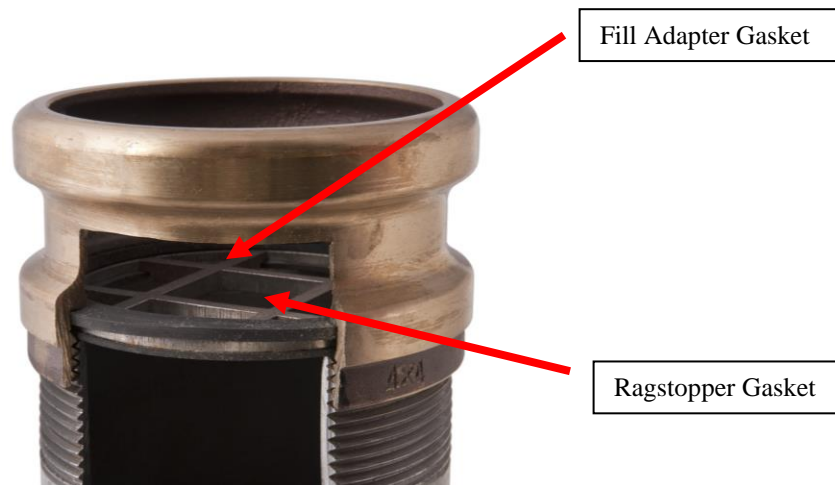

Proven Performance



UNIVERSAL VALVE CO., INC.

478 Schiller Street • Elizabeth, New Jersey 07206
(800) 223-0741 • (908) 351-0606 • Fax: (908) 351-0369
e-mail: sales@universalvalve.com
visit us at: www.universalvalve.com

