

“The Zapper™”

Installation Instructions


Find a location on the dispenser that would be very noticeable to the consumer. An ideal location would be by the credit card reader. Make sure that “The Zapper™” is away from any source of combustible vapor. Do not mount “The Zapper™” next to the nozzle.

Model # 1965-ZAPPER -Bolt mounted

Use “The Zapper™” as a template to mark the hole location on the dispenser. Before drilling check behind area for electronics or lines. Universal Valve is not responsible for damage to dispensers from drilling incorrectly. Drill the four holes using a 1/8” drill bit. Attach “The Zapper™” to the dispenser with the supplied nuts, screws and lock washers. Wrap the supplied grounding wire around one of the bolts and tighten the nut as illustrated by figure (a). Run the other end of the ground wire to the frame of the pump.

Model # 1965M-ZAPPER & 1965S-ZAPPER -Stick on and Magnetic Mount.

Find a location close to the edge of the dispenser door. Run the wire through the crease and attach the end of the ground wire to the frame of the pump.

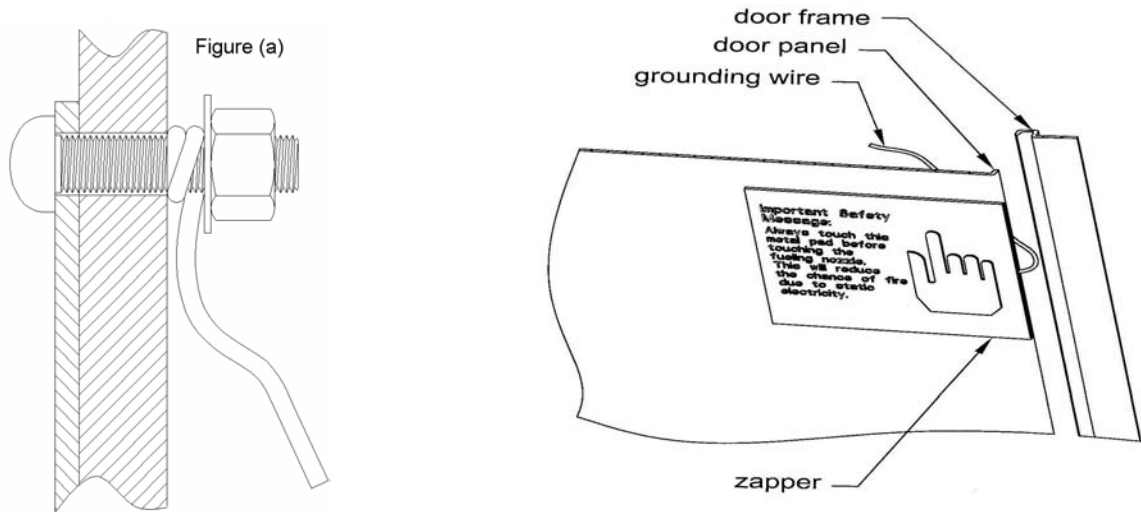

Universal Valve Company
478 Schiller St • Elizabeth NJ 07206
Phone 908-351-0606 • Fax 908-351-0369

www.universalvalve.com • sales@universalvalve.com

Lit.# L1965I